 
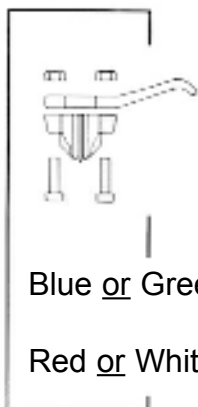 
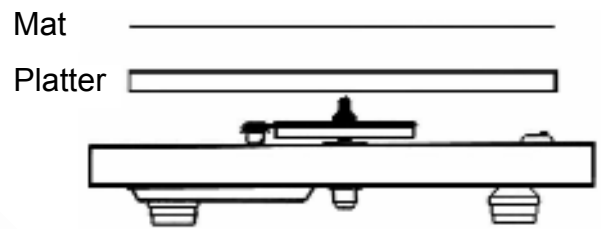 


INSTRUCTIONS

P l a n a r 7 8

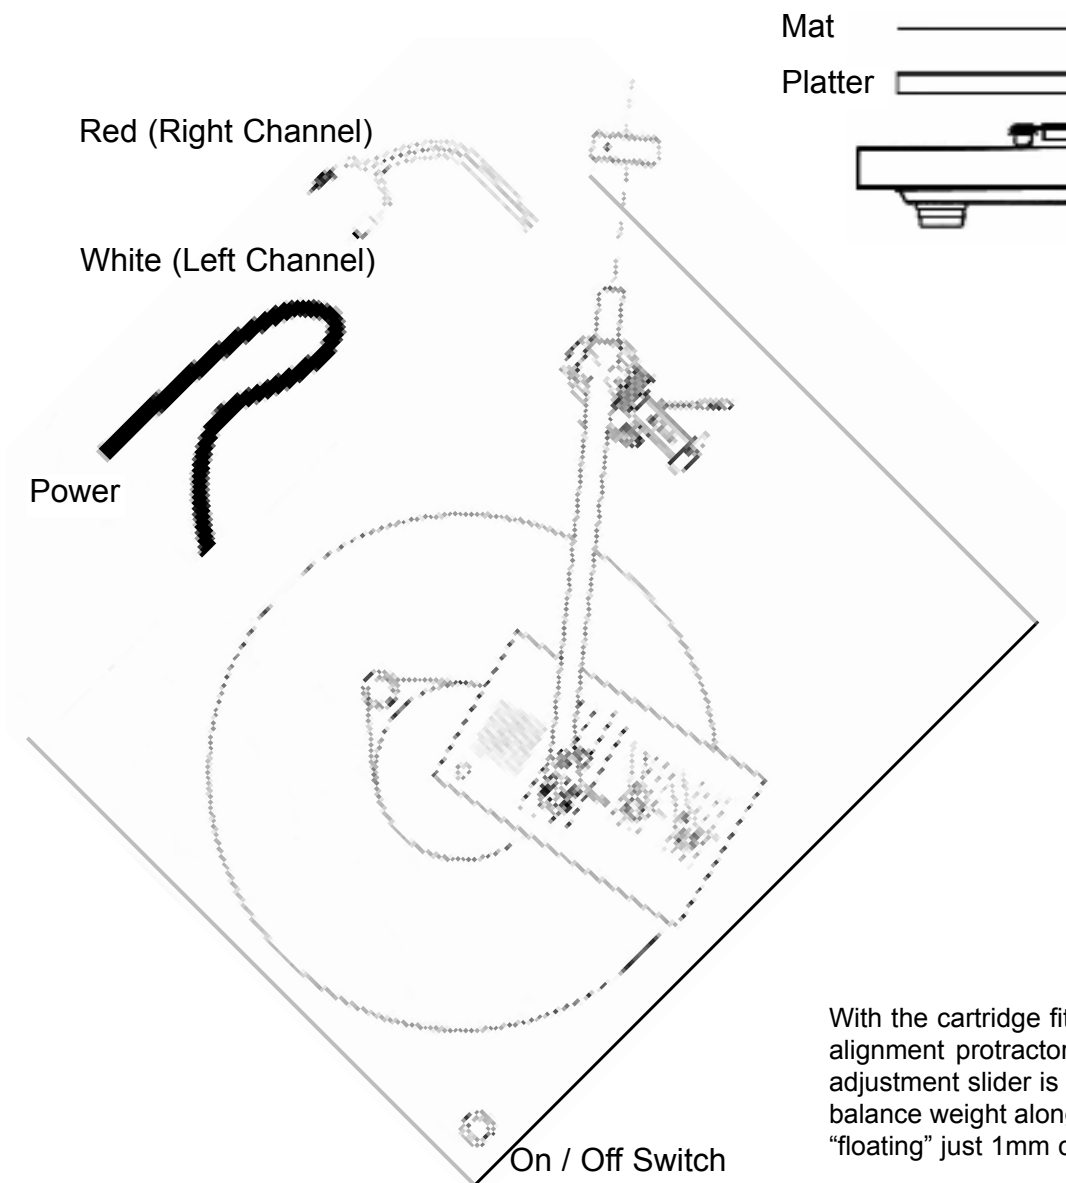

With the cartridge fitted and aligned, using the alignment protractor supplied ensure the bias adjustment slider is set to zero. Screw the balance weight along its shaft until the stylus is "floating" just 1mm clear of the record.

The recommended tracking force can now be applied by rotating the balance weight so that it moves towards the front of the arm. A half turn gives 1g tracking force. Always use a force which corresponds to the upper limit of the cartridge makers recommended range.

Manually rotating the platter before switching the deck on will assist in reducing motor wear and will achieve the correct RPM.

There is no requirement for the application of a bias force when playing 78 discs.

rega